


uPVC Door Glazing & Packing

“Toe & Heeling Glass” - The Principle




When installing glass or panel into a uPVC or Aluminium Door, it is essential that the glazing is “toe and heeled”.

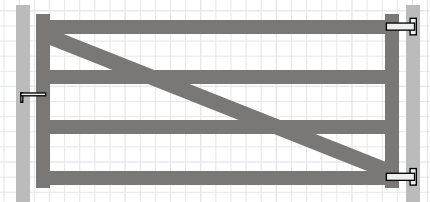

Toe and Heeling is a form of diagonal bracing the door (like a 5 bar gate) to prevent the door from “dropping” over time.

By packing the lower ‘hinge side’ corner and the top ‘handle side’ corner with black packers it squares the door up. If you wish to pack the door higher - we would suggest adding additional green “shim” packers in.

The more green packers you fit the higher it will lift the door(s). We recommend packing wide doors slightly high as they are likely to drop slightly over time.

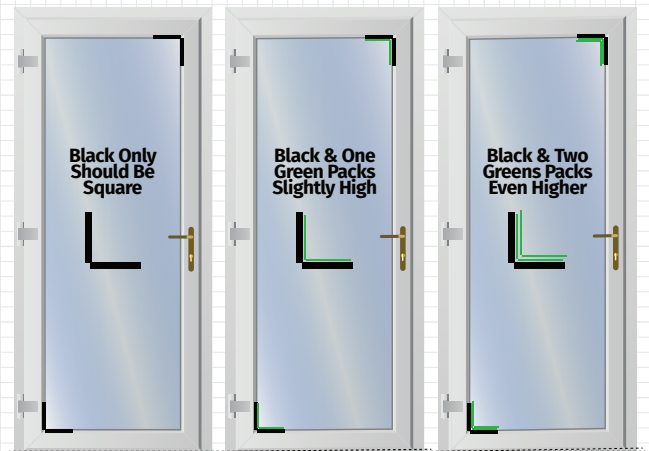

WE WOULD ALWAYS RECOMMEND ENSURING THAT THE FRAME IS SQUARE & GLASS IS TOE AND HEeled CORRECTLY BEFORE ADJUSTING HINGES

